 
 


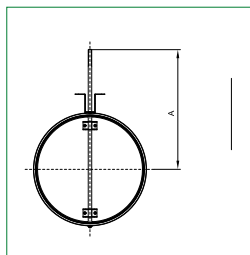

Spjæld Type DTF,DTM og DTMR

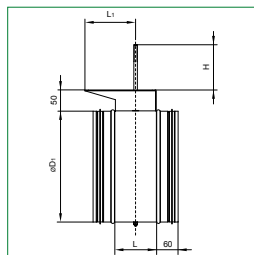


Ø1 nom mm	L1 mm	L mm	A mm	H mm	Vægt kg
80	143	117	136	47,8	0,95
100	143	117	151	52,8	1,10
125	143	117	169	57,8	1,35
160	143	117	195	67,8	1,70
200	143	117	200	52,8	2,10
250	143	117	226	52,8	2,90
315	198	117	300	87,8	3,85
400	198	178	300	67,8	9,05
500	198	178	360	77,8	11,95
630	198	178	415	67,8	15,70

Spjæld med universal motorkonsol for Belimo spjældmotorer


Valg af spjældmotor:

1. Find spjæld-type og størrelse.
2. Aflæs motortype i spjæld-skemaet (f.eks. LM).
3. I skemaet herunder vælges: On-off (DTM) eller spring-return (DTMR).
4. Følg de orange pile ned gennem skemaet til du finder motor-typen fra punkt 2.

Aksel 10x10

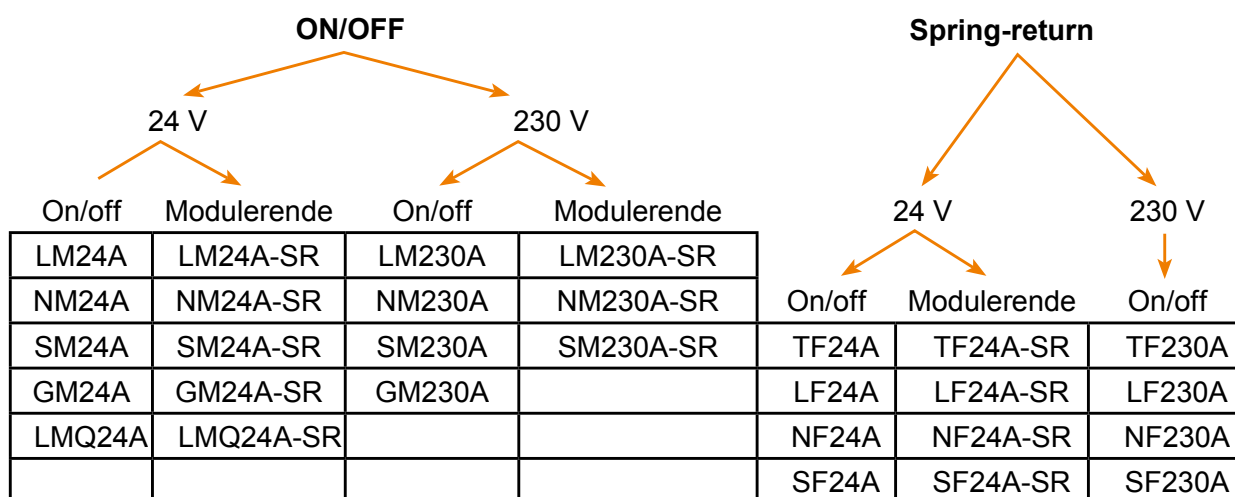


LM

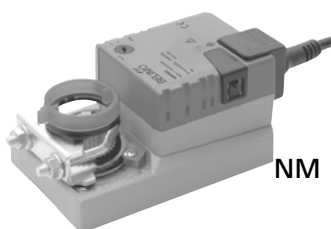

NM



SM

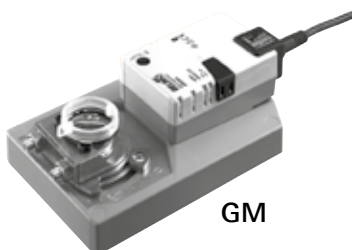


GM



TF



LF

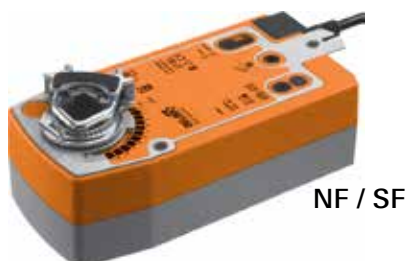

NF / SF

